




Special Note For Piantedosi Track

The Piantedosi Freedom track sensor bar has holes positioned at 3 1/2" intervals where the sensors are installed. We supply a wooden sensor bar with your timer that is mounted onto the bottom of the timer feet. The sensors are pre-mounted in the sensor bar that we supply. Piantedosi will supply an aluminum bar if you have requested it. If you need to remove the sensors from the bar we supplied, be sure to push them out from the topside with the back of a 1/4 or 3/16-inch drill. Do not pull them out from the back or push on the center black part.

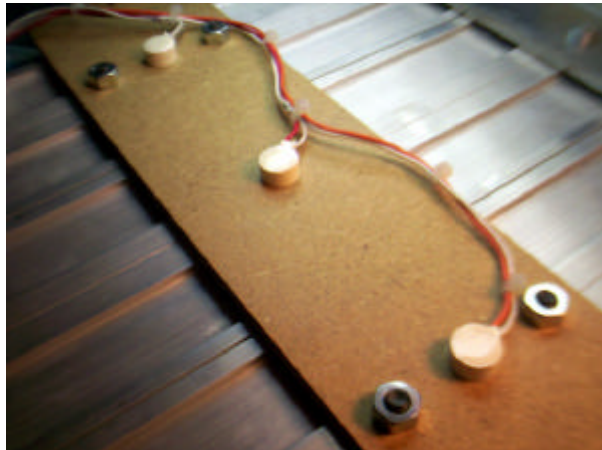

Make sure that you insert the sensors in the correct direction. The plug should be on the right side when you are looking at the front of the timer. The front of the timer should be facing the starting gate.